Ultura 2600 Platinum
Dry Iron

Instruction Booklet
SR2600

Please read these instructions carefully
and retain for future reference.

Contents

Sunbeam's Safety Precautions	**1**
Features of your Ultura Dry Iron	**2**
Using your Ultura Dry Iron	**3**
Care and Cleaning	**3**
Ironing Guide	**4**

Important instructions – retain for future use.

تأكد من تفهّم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید که احتیاط‌های بالا حتماً درك بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR IRON.

- Do not leave a hot iron within reach of children. If they come into contact with a hot iron it could lead to serious burns.
- Iron only on an ironing board.
- An iron takes approximately 30 minutes to cool down. Allow the iron to cool completely before storing.
- Do not wind the cord around the soleplate while the iron is still hot.
- Do not leave the iron unattended while it is plugged into the power outlet.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.
Ensure the above safety precautions are understood.

Features of your Ultura Dry Iron

Thermostat light
Illuminates to indicate that the iron is heating and goes out when it has reached the temperature selected on the temperature dial. The thermostat light cycles on and off during ironing as the iron maintains the selected temperature.

Temperature indicator
Align the desired setting with the temperature indicator.

Long cord with swivel cord outlet
The swivel cord outlet is ideal for left or right hand use, and provides greater versatility and ease of movement when ironing. The flexible grommet protects the cord from fraying.

Temperature dial
Allows you to select the desired temperature for each garment.

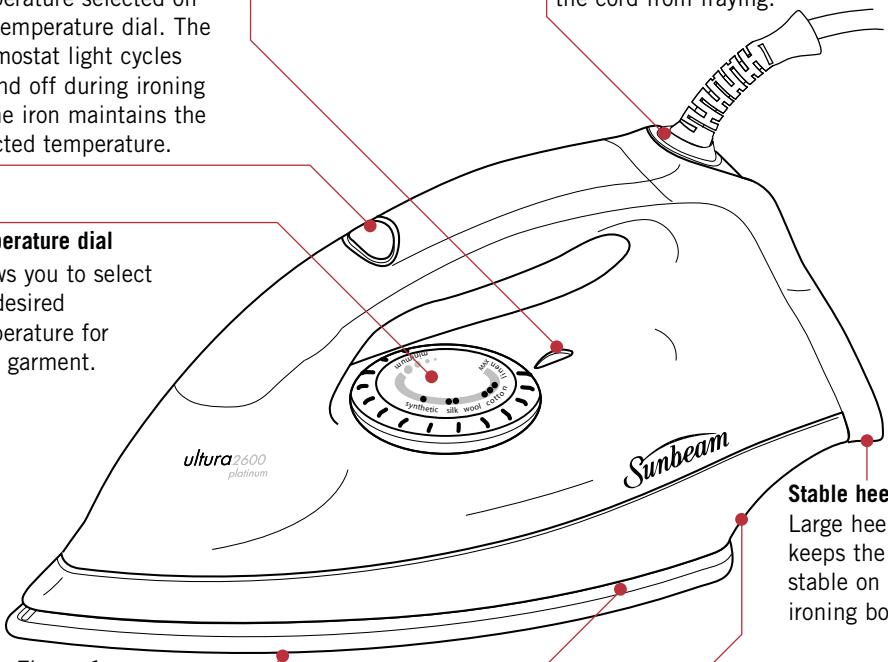

Figure 1

Stable heel rest
Large heel rest keeps the iron stable on the ironing board.

Teflon® Platinum Pro non-stick soleplate
Glides easily across all types of fabric and prevents sticking.

Full length button groove
For ironing around buttons.

Cord wrap facility
The built-in cord wrap facility allows you to wind the cord around the heel for neat and tidy storage of the cord when the iron is not in use.

Using your Ultura Dry Iron

Before first use

Remove any adhesive stickers, plastic covers or cardboard sleeves from the soleplate. Ensure that all adhesive is removed by rubbing the soleplate with a cloth dampened with methylated spirits.

NOTE: When turned on for the first time, your new iron may give off vapours for up to 10 minutes. This is due to the initial heating of the materials used. It is safe, not detrimental to the performance of the iron, and will not reoccur.

Using your iron

1. Insert the 3 pin plug into a 230/240 volt power outlet and turn the power on.
2. Turn the temperature dial to the desired setting by aligning the setting on the dial with the temperature indicator. The thermostat light will illuminate to indicate that the iron is heating to the selected temperature. When the thermostat light goes out the iron is at the selected temperature and is ready to iron.

NOTE: When the temperature dial is changed from a high setting to a lower temperature setting during ironing, the thermostat light will go out immediately. This indicates that the iron is cooling to the selected temperature. To ensure that the iron has reached the selected temperature and is not too hot, wait until the thermostat light comes on again and then goes out before ironing.

Care and Cleaning

After each use

1. Turn the power off and remove the plug from the power outlet.
2. Allow the iron to cool before winding the cord around the built-in cord wrap.

Storage

Always store the iron on its heel rest.

NOTE: Do not store the iron with the soleplate facing down, or in the carton.

Cleaning

To clean the exterior of your iron, wipe over with a damp soft cloth and wipe dry.

Caution: Do not use harsh abrasives, chemical cleaners or solvents to clean the exterior of your iron as these will damage the surface.

Cleaning the Teflon® Platinum Pro non-stick soleplate

The non-stick coating reduces sticking of fabrics and starches to the soleplate. Do not iron over sharp objects such as buttons, studs and zippers, as these will scratch the surface.

Wipe the soleplate with a damp soft cloth after each use. If polyester has burnt to the soleplate, iron a damp cotton cloth while hot.

Caution: Do not use scouring pads, abrasives or harsh cleaners to clean your Teflon® Platinum Pro soleplate, as these will scratch and damage the surface.

Ironing Guide

Selecting ironing temperature

Always read garment labels and follow the manufacturer's ironing instructions.

Hints for easier ironing

- Sort articles to be ironed according to the type of fabric. This will reduce the need to adjust the temperature to suit varying garments.
- Start with garments requiring lower temperatures and work your way through to items requiring higher temperatures.
- If you are unsure of the fabric content of a garment, test a small area such as a seam or inside hem section before ironing a visible area. Start with a low temperature and gradually increase the heat to find the best setting for ironing the garment.
- When reducing the temperature to iron sensitive fabrics, allow approximately 2 minutes for the iron to cool to the new setting.
- Pure woollen fabrics (100% wool) can be ironed with the temperature dial set to Wool. Use an ironing cloth to prevent shine marks on the fabric.
- Fabrics such as velour, wool, linen and silk are best ironed with an ironing cloth to prevent shine marks.
- Never iron areas of a garment where perspiration marks are visible, as the heat of the iron will fix the stains, making them permanent.

‘Sunbeam’, and ‘Ultura’ are registered trademarks of Sunbeam Corporation.
Made in China to Sunbeam's specification. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2005.
A.B.N. 45 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit **www.sunbeam.com.au** or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059
New Zealand 0800 786 232

06/05

Consumer Hotline

Australia
1800 025 059

New Zealand
0800 786 232

www.sunbeam.com.au

Sunbeam is a registered Trademark of Sunbeam Corporation Limited. ABN 45 000 006 771.

© Sunbeam Corporation Limited 2005.